


# ***ELECTRONIC LOW EFFORT ACCELERATOR***

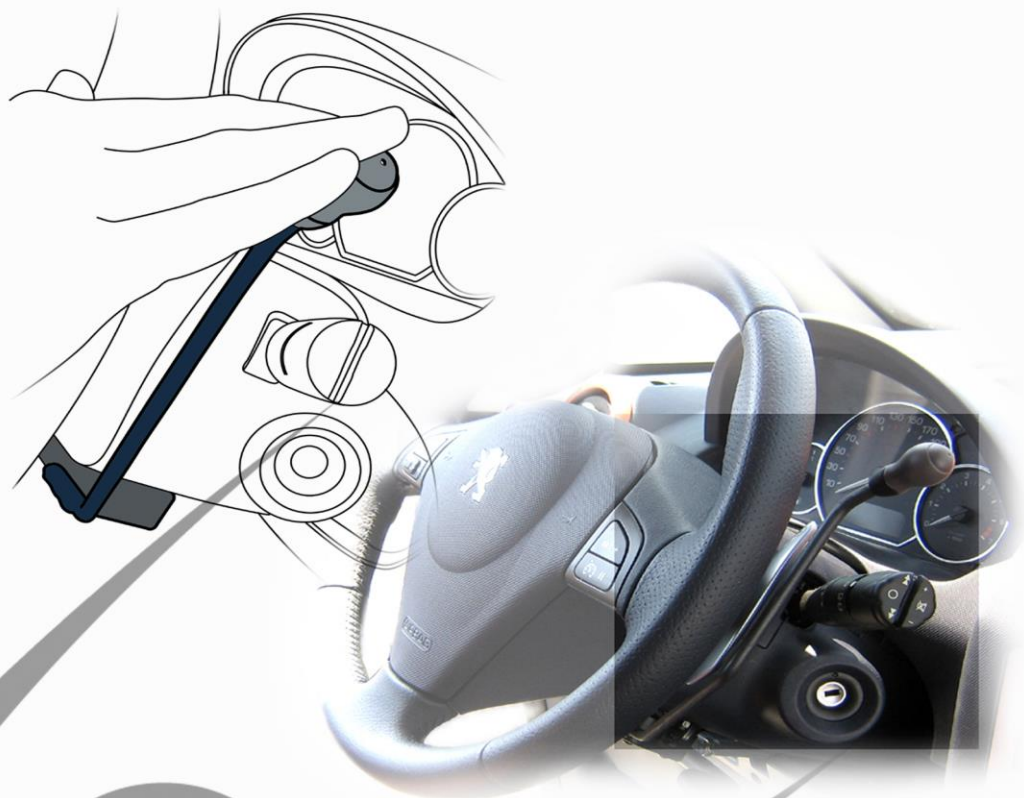

## **Instructions**

### ***Accel III***

02/04/2015



**BAS (NW) Ltd Mobility Controls**  
School Lane - Hollins Green  
Warrington - WA3 6LJ  
Tel: 0161 776 1594  
[www.basnw.co.uk](http://www.basnw.co.uk)  
[office@basnw.co.uk](mailto:office@basnw.co.uk)



**Motability**  
The leading car scheme for disabled people



## Table of contents

*Presentation of ACCEL® III*


4

*Use of ACCEL® III*

5

*Technical characteristics*

7

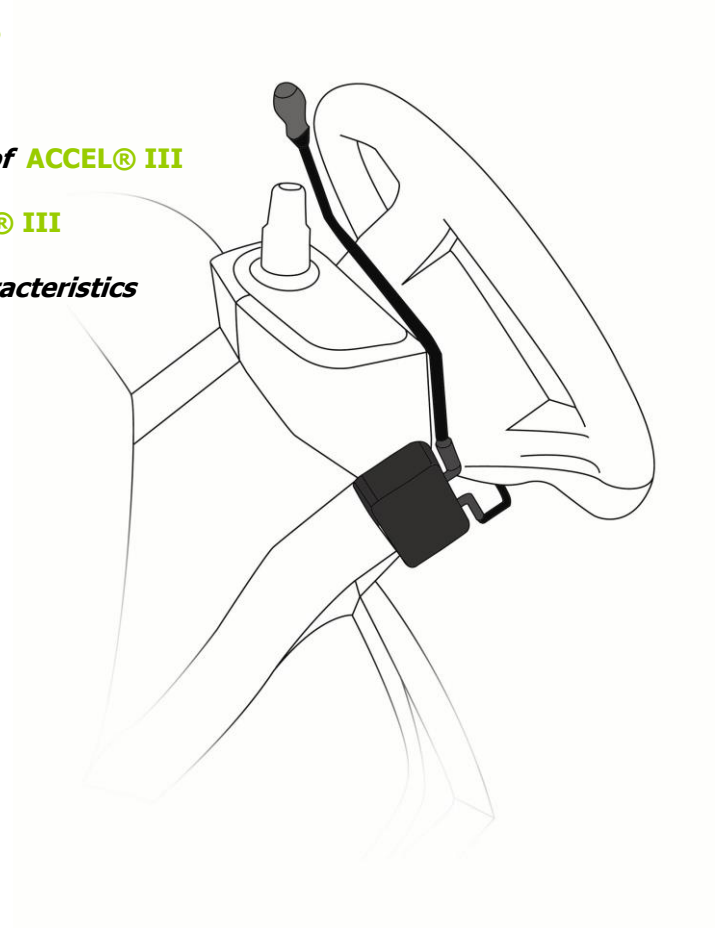

**ACCEL® III** consists of two identical acceleration commands positioned on both sides of the steering wheel. Pushing down of these levers allows for a very precise acceleration.



Placed under the steering wheel, at the level of the column casing, it permits to keep the airbag.

Two possibilities for driving :

- conventional, with accelerator pedal
- manual, with **ACCEL® III**

An electronic push button with a warning light activates the manual mode.



**ACCEL® III** can be installed on vehicles equipped with automatic gear and electrical accelerator pedal.

A **Brake on steering wheel** should be installed as a complement to this system.

## **Use of ACCEL® III**

**1- At the moment of starting up, the conventional mode of driving is active.**

**2- Selection of manual mode :**

- **A 30 second pressure on the push button after the starting up of the engine activates the manual mode, warning light turned on to confirm this selection.**




**It is impossible to interrupt manual mode without switching off the engine.**

- **If manual mode is not selected after 30 seconds, it is necessary to restart the engine and repeat the selection procedure.**

***Security - Applying the brakes stops acceleration when manual mode is activated.***



**ACCEL® III** makes possible a very precise acceleration. Starting up and manoeuvring are easier and full power of the vehicle is maintained.

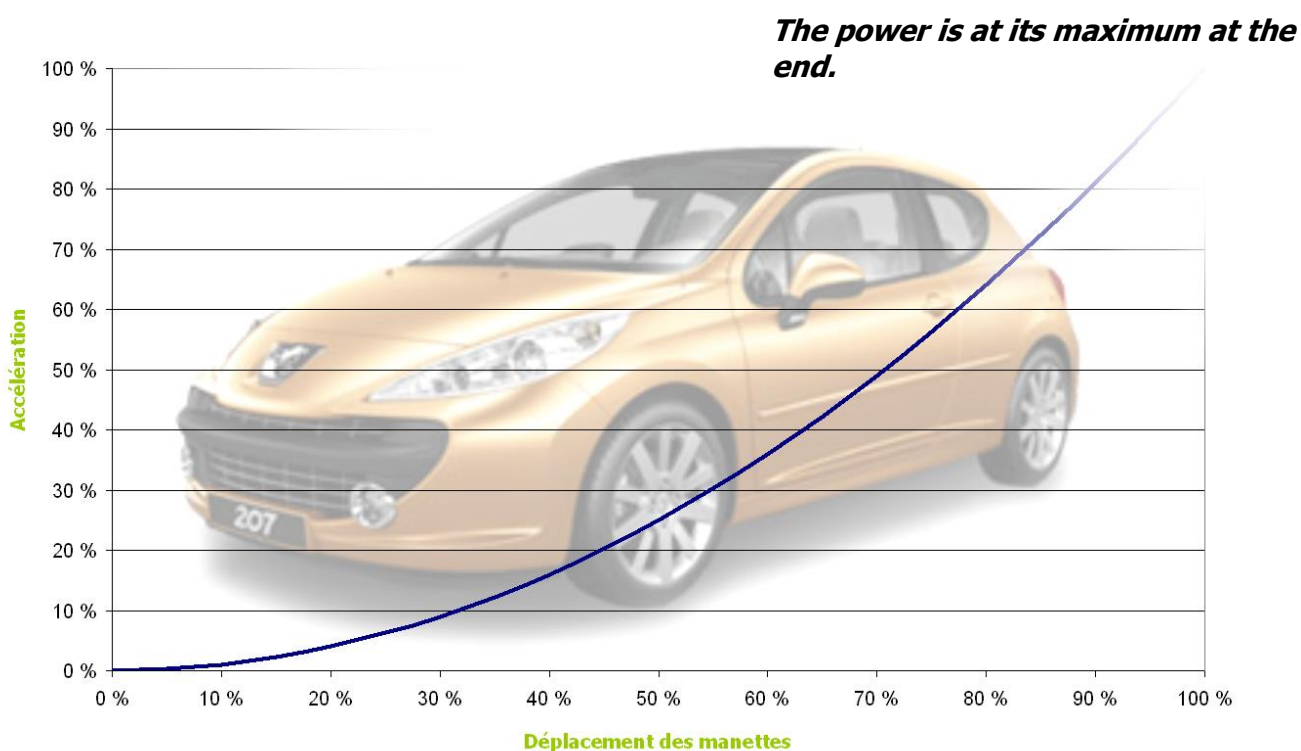

*Acceleration is progressive at the beginning of the levers travel.*

## In the Event of an Accident

Should your vehicle be involved in an accident your controls should be checked by the fitter before use.

## Warranty

BAS (NW) Ltd guarantees this product and installation for three years providing that it is in no way tampered with. All warranty work is done by us at our premises. Warranty is null and void if the product is not serviced annually.



### *Technical characteristics*

**Working temperature :**

- from  $-40^{\circ}$  to  $+85^{\circ}\text{C}$

**Power Supply :**

- 12 V (from 10 to 16 V)

**Complies with regulation 95/54/EC**

# Service Schedule

The first three services are necessary to the validity of your warranty.

First service at 12 months                      Date.....

Second service at 24 months                      Date.....

Third service at 36 months                      Date.....

Fourth service at 48 months                      Date.....

Fifth service at 60 months                      Date.....

These services are validated by our company stamp.



**BAS (NW) Ltd Mobility Controls**  
School Lane - Hollins Green  
Warrington - WA3 6LJ  
Tel: 0161 776 1594  
[www.basnw.co.uk](http://www.basnw.co.uk)  
[office@basnw.co.uk](mailto:office@basnw.co.uk)