



Instructions

Electronic Left Foot - ACCELerator

03/02/2009



BAS (NW) Ltd Mobility Controls
School Lane - Hollins Green
Warrington - WA3 6LJ
Tel: 0161 776 1594
www.basnw.co.uk
office@basnw.co.uk



Motability
The leading car scheme for disabled people

Table of contents

<i>Presentation of LF-ACCEL</i>	<i>4</i>
<i>Use of LF-ACCEL</i>	<i>5</i>
<i>Technical characteristics</i>	<i>6</i>




Presentation of **LF-ACCEL**

LF-ACCEL is an electronic accelerator, which allows an automatic vehicle to be driven with the left foot.

Compatibility

This equipment can be fitted to any vehicle with automatic gearbox* and electronic accelerator pedal.

* Please, contact us for any special vehicle.

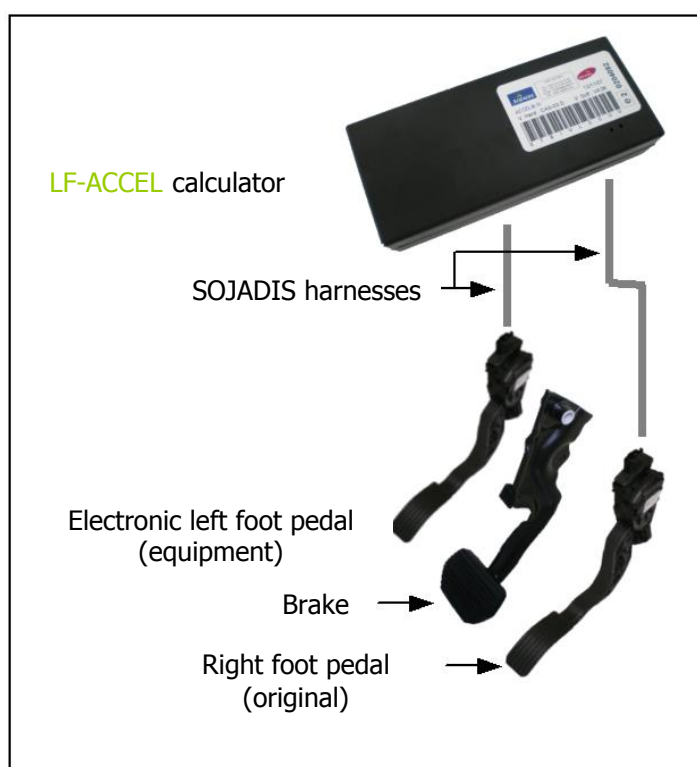

Use of **LF-ACCEL**

1- At the moment of starting up, the original pedal is active (right foot accelerator is active and left foot accelerator is inactive).

2- Selection of left foot accelerator (right foot accelerator is inactive and left foot accelerator is active):

- To activate **LF-ACCEL**, press the push button within 30 seconds after the starting-up of the engine. The warning light will turn on to confirm this selection.




It is impossible to interrupt the left foot accelerator without switching off the engine.

- If the **LF-ACCEL** is not selected after 30 seconds, it is necessary to restart the engine and repeat the selection procedure.



Warning - Applying the brake will override the **LF-ACCEL** throttle input resulting in no acceleration.

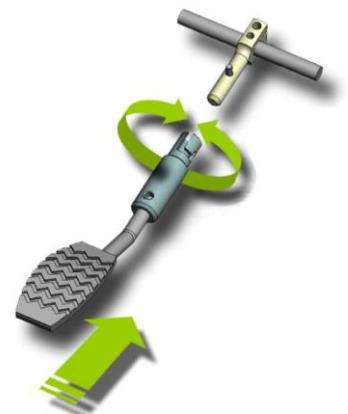

Technical characteristics

Operating temperature:

- **From - 40° to + 85°C**

Power:

- **12 V (10 - 16 V)**

In compliance with regulation 95/54/EC

In the Event of an Accident

Should your vehicle be involved in an accident your controls should be checked by the fitter before use.

Warranty

BAS (NW) Ltd guarantees this product and installation for three years providing that it is in no way tampered with. All warranty work is done by us at our premises. Warranty is null and void if the product is not serviced annually.

Service Schedule

The first three services are necessary to the validity of your warranty.

First service at 12 months Date.....

Second service at 24 months Date.....

Third service at 36 months Date.....

Fourth service at 48 months Date.....

Fifth service at 60 months Date.....

These services are validated by our company stamp.

