

Accel Quad

User manual



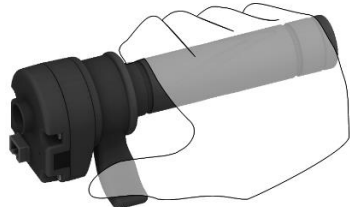
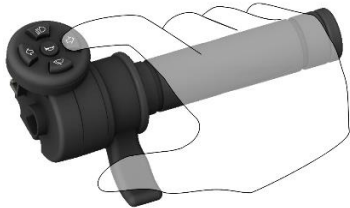
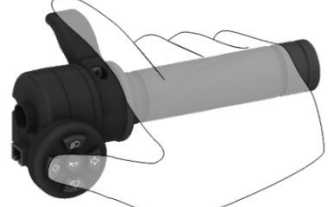
07/01/2021

Table of contents

POSSIBLE CONFIGURATIONS	3
ACCEL QUAD	4
PRESENTATION OF ACCEL QUAD	4
<i>Location in the vehicle</i>	4
<i>Vehicles concerned</i>	4
<i>Speed limiter deactivation</i>	4
HOW TO USE ACCEL QUAD	5
<i>Product security</i>	5
<i>ACCEL QUAD activation</i>	5
<i>Set back to normal use</i>	5
<i>Speed limiter deactivation</i>	5
MINI KEYPAD	6
PRESENTATION OF MINI KEYPAD	6
<i>Location in the vehicle</i>	6
<i>Vehicles concerned</i>	6
HOW TO USE THE MINI KEYPAD	7
<i>Activation</i>	7
<i>Secondary functions locations</i>	7
NOTES	8
<i>MINI KEYPAD functions activation</i>	8
<i>MINI KEYPAD functions deactivation</i>	8

POSSIBLE CONFIGURATIONS

You have in your vehicle the ACCEL QUAD, the mini-keypad or both products. See below the different configurations introduced in this user manual

Equipment	Product picture	Part in the manual	Comments
ACCEL QUAD		« ACCEL QUAD »	Acceleration with the thumb
ACCEL QUAD		« ACCEL QUAD »	Acceleration with the index finger
ACCEL QUAD + MINI KEYPAD		« ACCEL QUAD » « MINI KEYPAD »	Acceleration with the thumb + Activation of Mini Keyboard with index finger
ACCEL QUAD + MINI KEYPAD		« ACCEL QUAD » « MINI KEYPAD »	Acceleration with the index finger + Activation of Mini Keyboard with the thumb

ACCEL QUAD

Presentation of **ACCEL QUAD**

Location in the vehicle

ACCEL QUAD can be mounted to the left or right of the steering wheel. You can accelerate and brake with this all-in-one driving aid.

Vehicles concerned

ACCEL QUAD can be installed on any vehicle with automatic transmission and an electronic accelerator pedal.

Two possibilities for driving:

- Conventional, with accelerator pedal
- Manual, with **ACCEL QUAD**

Speed limiter deactivation

ACCEL QUAD has an electronic kick down to deactivate the speed limiter (see page 7)



How to use **ACCEL QUAD**

Product security

Acceleration cuts out when braking is applied.

ACCEL QUAD activation

At the moment of starting up, the original pedal is active.

To activate **ACCEL QUAD** please follow the instructions below:



Do not touch ACCEL QUAD when you start on the vehicle and during its activation.

1. Start on your vehicle.
2. A 30 second pressure on the push button after the starting up of the engine activates the manual mode, warning light turned on to confirm this selection..

Accel Quad not activated



Accel Quad activated



If **ACCEL QUAD** is not selected after 30 seconds, it is necessary to restart the engine and repeat the selection procedure.

Set back to normal use

Switch off your engine and start it up again.

Speed limiter deactivation

To deactivate the speed limiter (when overtaking for example), you just need to twist the grip "at rest". If you need to activate the speed limiter again, you need to switch it on with the original switches.

MINI KEYPAD

Presentation of *MINI KEYPAD*

Location in the vehicle

The *MINI KEYPAD* is located on *ACCEL QUAD*. You can activate secondary driving controls with it.

Vehicles concerned


We can install *MINI KEYPAD* on most vehicles (contact us if you need more info).

How to use the **MINI KEYPAD**

Activation

When you start on the vehicle, the functions from the **MINI KEYPAD** are active.

Secondary functions locations

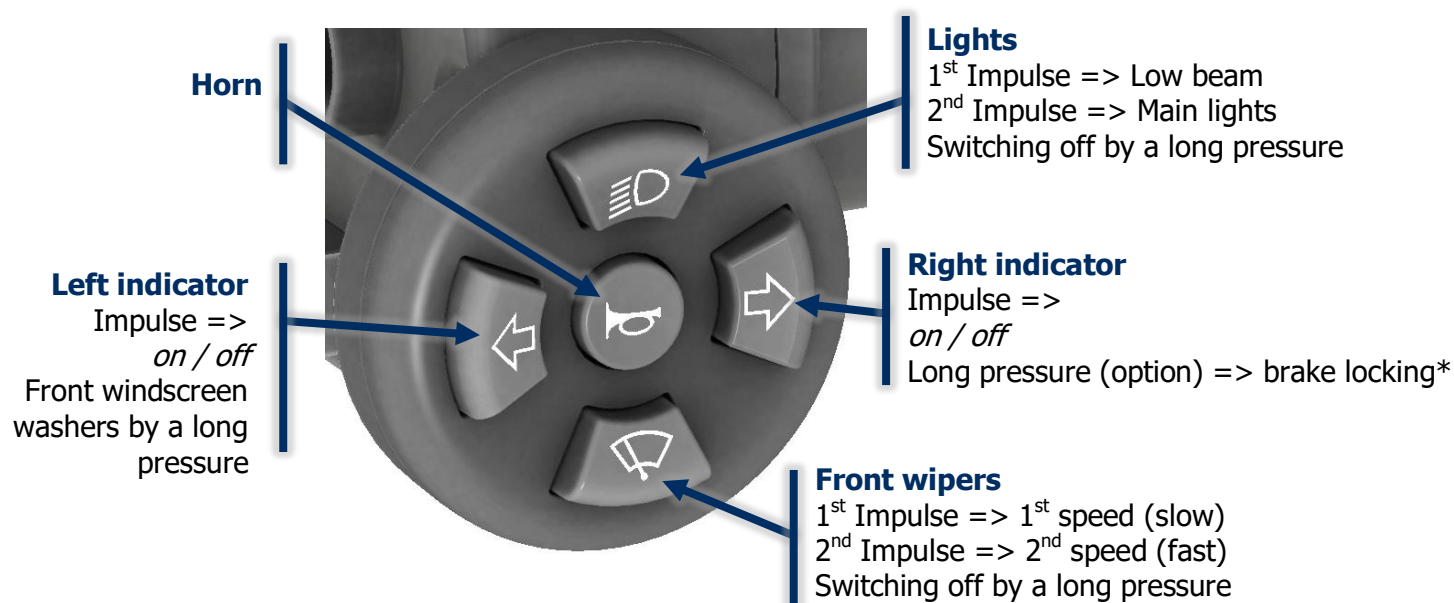

**If you have a manual brake Stopdis II FUA with a locking system, you can lock the brake lever by a long press on the right indicator button. Please read carefully the user manual from Stopdis II before using it. SOJADIS Equipement does not assume any liability if an accident or property damage has been occurred due to improper use as described into the manual brake user manual.*



CRÉATEUR d'aides à la conduite

Notes

MINI KEYPAD functions activation

When a function is activated by the **MINI KEYPAD**, you need to deactivate the function by the **MINI KEYPAD**.

MINI KEYPAD functions deactivation

To cancel the functions of the **MINI KEYPAD**, you just need to switch off the engine.