

Specific installation instructions with F119-SCP


The mounting set is a wiring harness specially designed for these vehicles ⇒



Installation on the vehicle

Cut the needed length of wires of **COMDIS®** wiring harness and connect them (weld and insulate) to the vehicle as indicated (see below)


Brown wire: connector A
Blue wire: connector B
(see below)

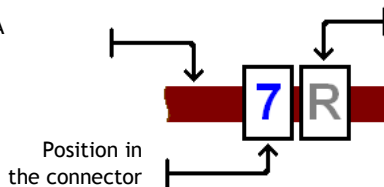

Option:
Vehicle wires to be cut and insulate
R: to connect on the commodos/switch side
Q: to connect on the light or motor side

Examples:

- The wire **6** has to be connected to **terminal 6** of the vehicle **connector B**
- The wire **2 R** has to be connected to **terminal 2R** of the vehicle **connector A** (switch side). The vehicle wire is cut and insulate.

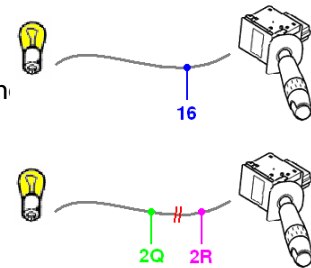

Vehicle connector

A White connector , white/grey or black - 16 pins
(On the top of column)




B White connector or white/black 12 or 16 pins
(On the rotating contactor - Horn)



Other wires

Red ⇒ to connect to ignition+ (12v after ignition)

Black ⇒ to connect to ground/earth signal

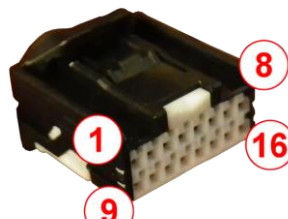

IMPORTANT: Connect this wire in position 1 or 9 or 10 depending on the vehicle